



Hyper-Alerts™ Installation Instructions


Remove the **YOUR SPEED** Hyper-Alert™ faceplate from the shipping box and remove the retention clip that is securing the conduit.

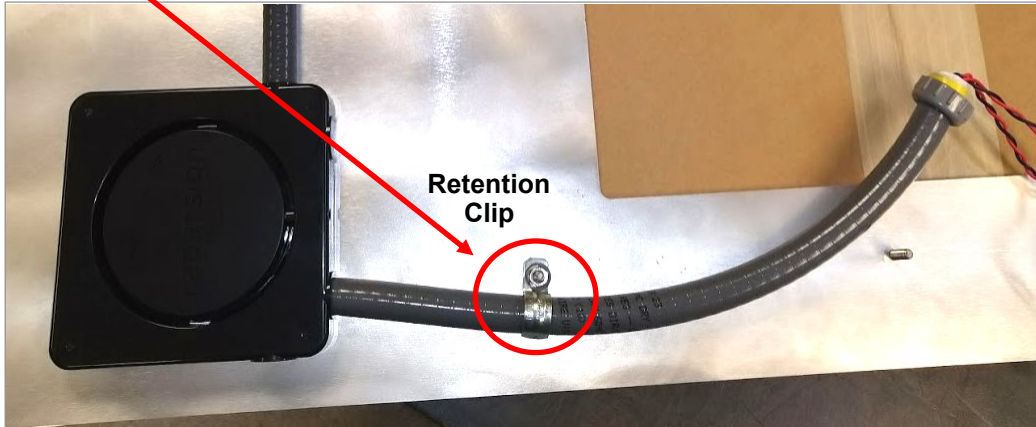



Use the retention clip to install the **YOUR SPEED** Hyper-Alert faceplate to the radar speed sign housing and to secure the conduit to the back of the radar speed sign.

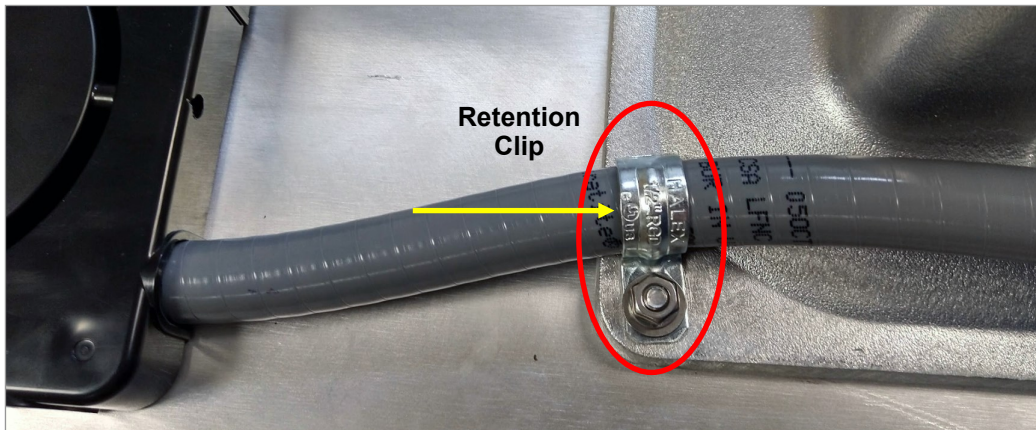



Open the Junction box on the side of the Radarsign

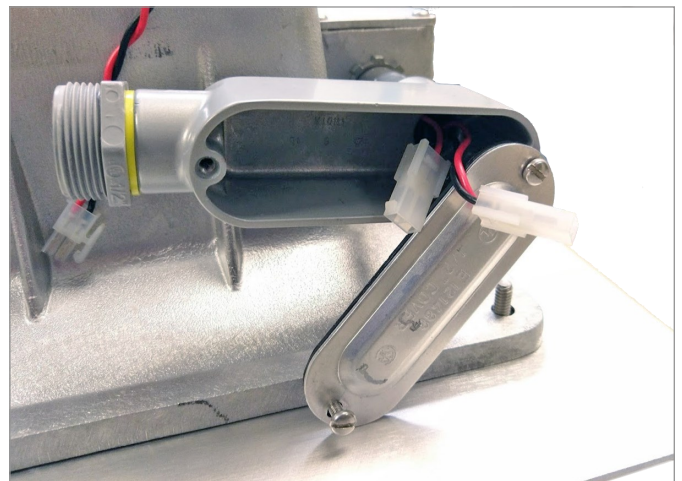

Take the two pairs of wires that are inside of the conduit and feed them into the junction box.

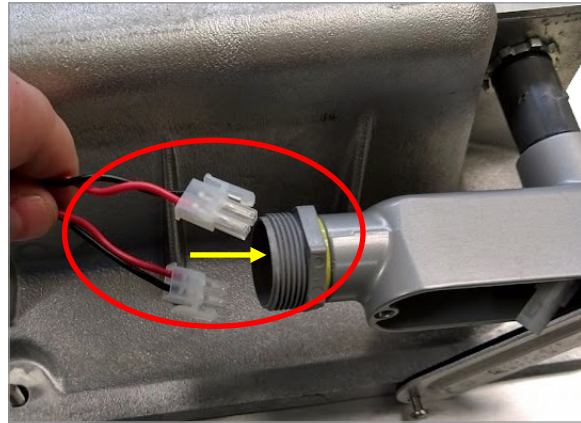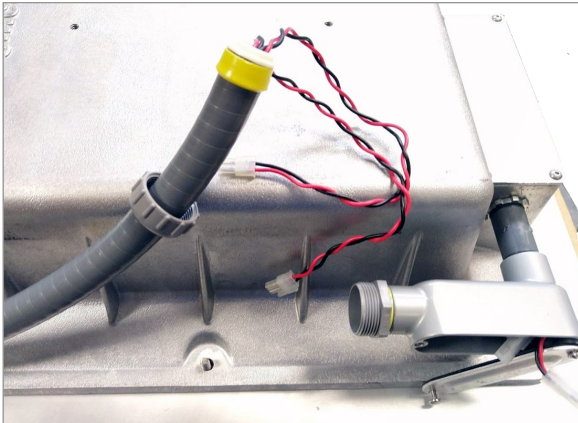

Insert the end of the conduit onto the junction box and tighten the conduit fitting.

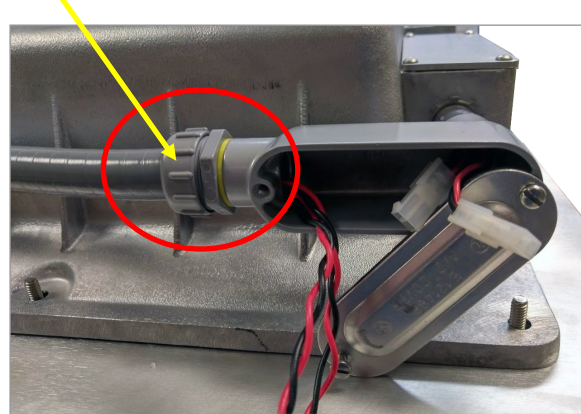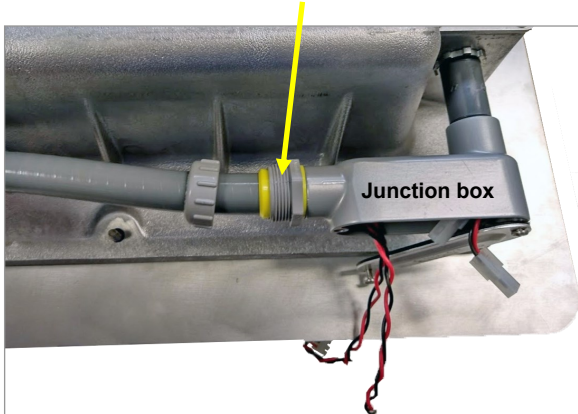

Make your two beacon connections in the junction box and reinstall the cover plate.

